




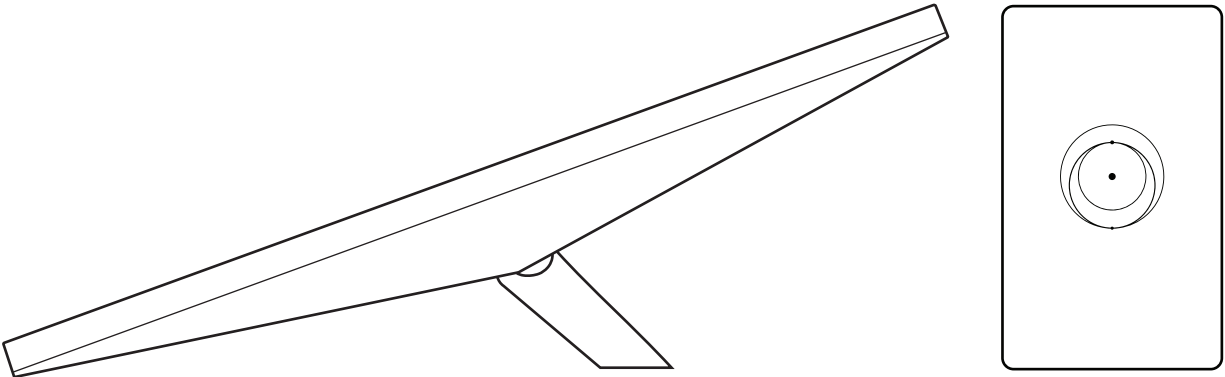


What's In The Box

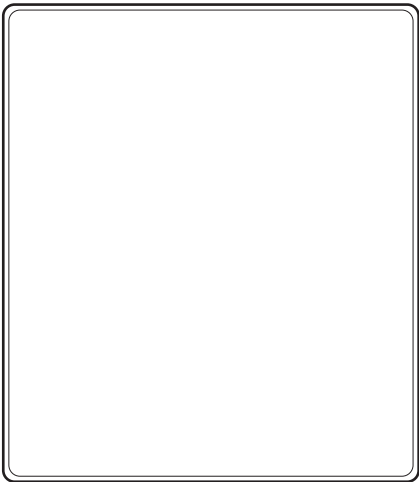


Starlink with Integrated WiFi

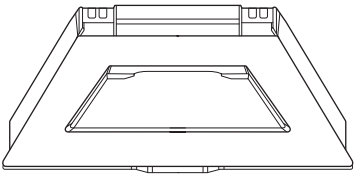


Kickstand

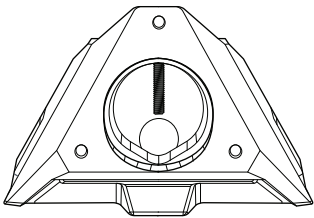

Pipe Adapter and Flat Mount

 


DC Power Cable
15 m
(49.2 ft)

 


Power Supply




Starlink Plug

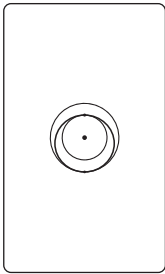

Router Mini

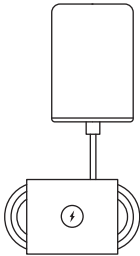

Router Mini
Power Supply

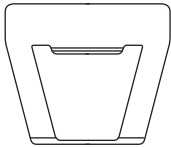

Router Mini
Stand


1 | Download the Starlink App

Download the Starlink App and scan the QR code to step through the install process.




2 | Find A Clear View of Sky and Check for Obstructions

Your Starlink needs a clear view of the sky so it can stay connected with satellites as they move overhead. Objects that obstruct the connection between your Starlink and the satellite, such as a tree branch, pole, or roof, will cause service interruptions. Use the obstruction tool in the App to ensure you have selected a suitable mounting location.

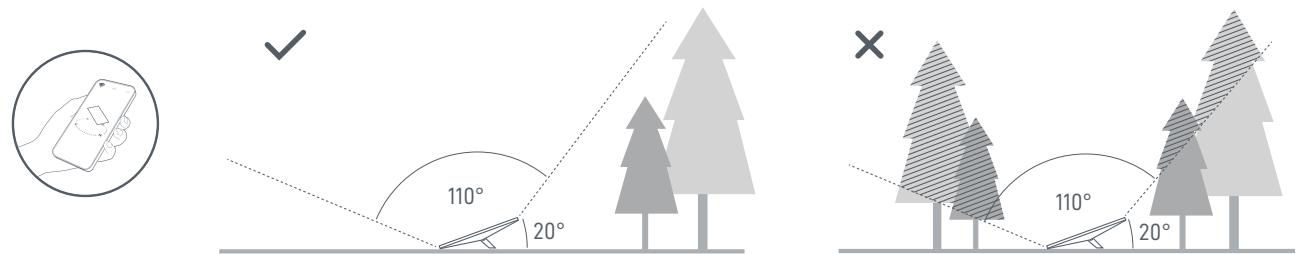


If you could not find a clear field of view from the ground level, consider installing in an elevated location, like a roof, pole, or wall. Additional mounts and accessories are available for purchase on the Starlink Shop.

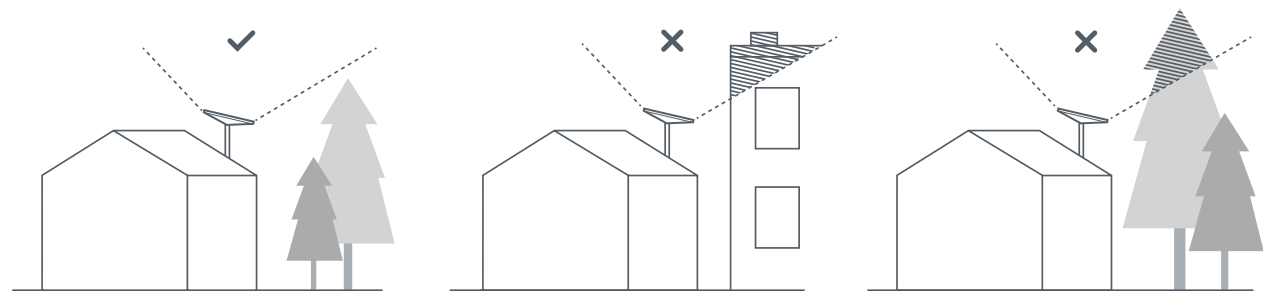

3 | Plug in Starlink


Lift the kickstand and plug one end of the provided cable into your Starlink. Ensure the plug is fully inserted such that the plug face is flush with the surface.

Route the other end of the power cable to your power supply and plug it into a power outlet.

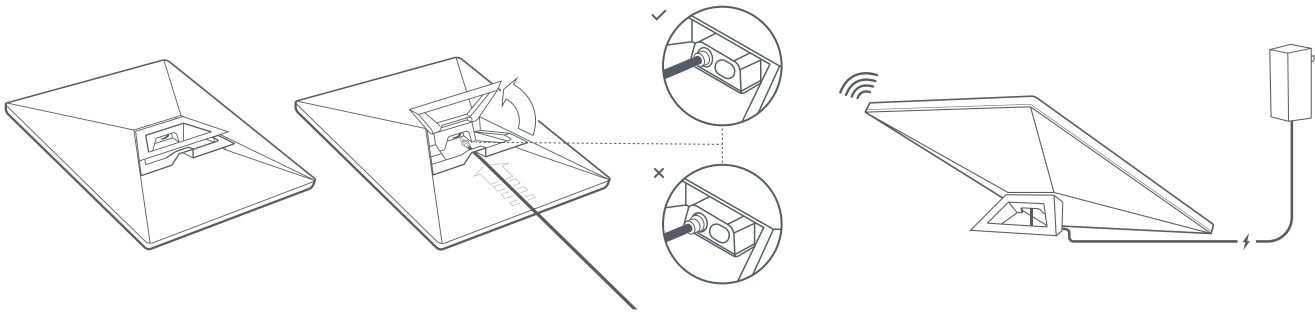

4 | Connect to WiFi


1. On your device, find and connect to the STARLINK network in your WiFi settings.

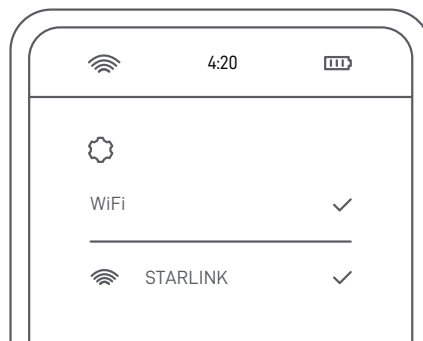

2. You are now connected! Open the Starlink App to customize additional settings, check your connection, and more.

5 | Align Starlink

An alert on the App will show if you need to rotate Starlink to be properly aligned. Tap the alert to use the alignment tool.


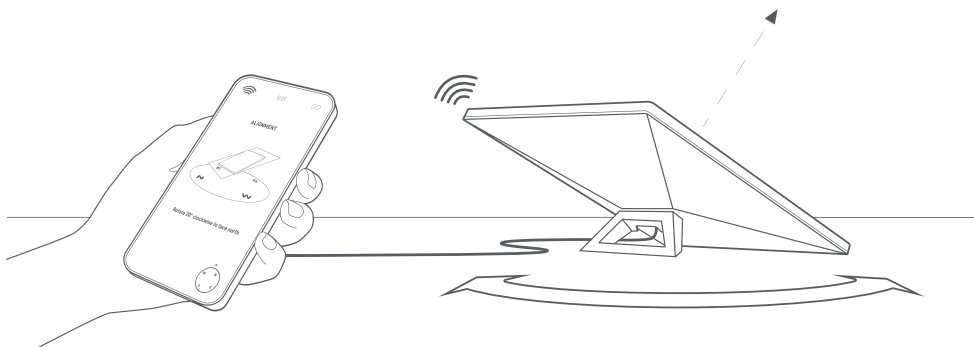


Can't Get Online?

1. Open the Starlink App to check for any alerts, outages, or obstructions.
2. Check the status light on the back of your Starlink.

Slow Blinking — Powered on.
No Light — No power to Starlink.
Fast Blinking — LED will blink quickly for 3 seconds while holding down the reset button, then LED will turn off as your Starlink reboots.

3. Make sure everything is securely plugged in and there is no damage to hardware or cables.
4. Power cycle your Starlink by unplugging from power and then plugging back in.
5. Factory reset the Starlink by locating the reset icon on the back. Press down firmly until you hear a click and hold for 3 seconds. The LED will blink quickly and shutoff when complete.

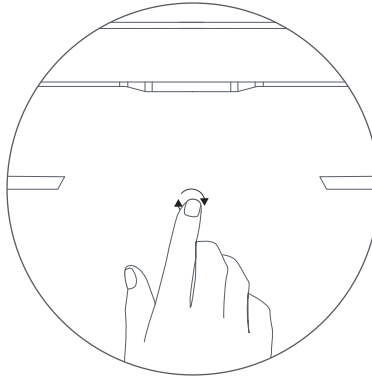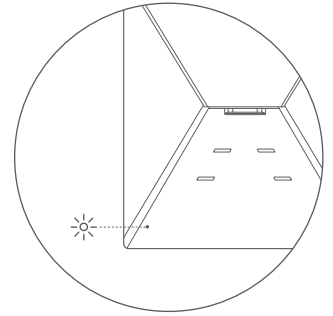


6. If none of these work, contact Starlink Customer Support in the app or the Support section of [starlink.com](https://support.starlink.com)

1 | Set Up Your Starlink

Start by making sure your Starlink is set up and connected to the internet prior to setting up your router.

Connect to your existing Starlink WiFi network from your device.


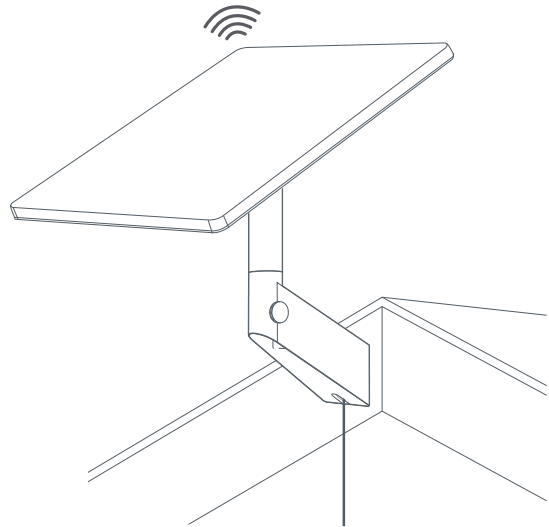


2 | Position the Router(s)

Place the router(s) in the desired location. We recommend the following guidelines for setting up your mesh network:

- Place the router away from thick walls, bulky furniture and large electronics like TVs. For best results, elevate router off the ground such as on a shelf.
- Avoid multiple obstructions (ex. cement walls and metal appliances).
- Mesh nodes connect wirelessly, but a wired connection with Ethernet can provide even better performance.
- Place additional routers no more than two rooms away from each other. Closer placement improves speed. While greater distance increases range they may reduce performance.


Repeat with additional mesh nodes.

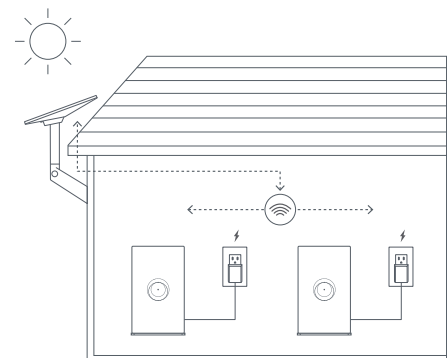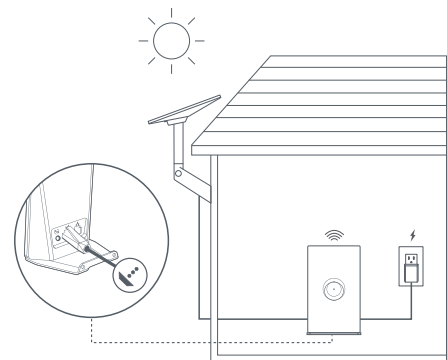

3 | Power on Mesh


Insert the power cable to the back of the router and plug the power supply into a power outlet. An LED will turn on signifying the unit is powered on.

See below for more information on wirelessly vs wired meshing.

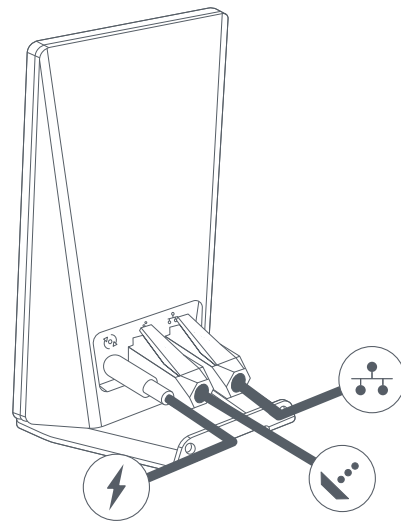


Using the RJ45 Port

1. Remove the Starlink Plug

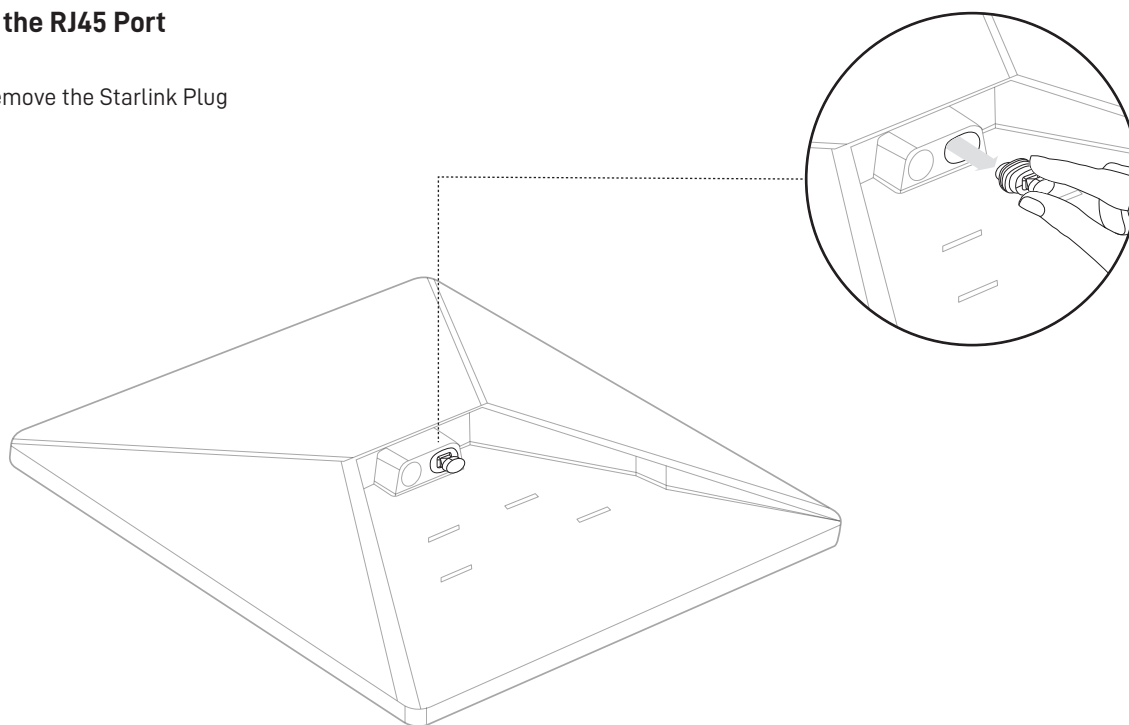


2. Plug in the Mini Starlink Cable available on shop.starlink.com or your own ethernet cable into the port. Connect the other end of your cable to your wired mesh or 3rd party hardware.

Note: This product is no longer rated IP67 with a standard RJ45 cable.

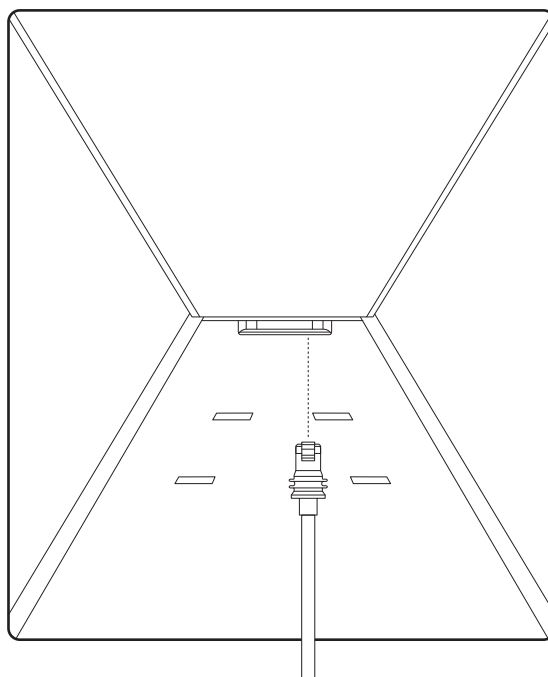


WIRED MESH GUIDE

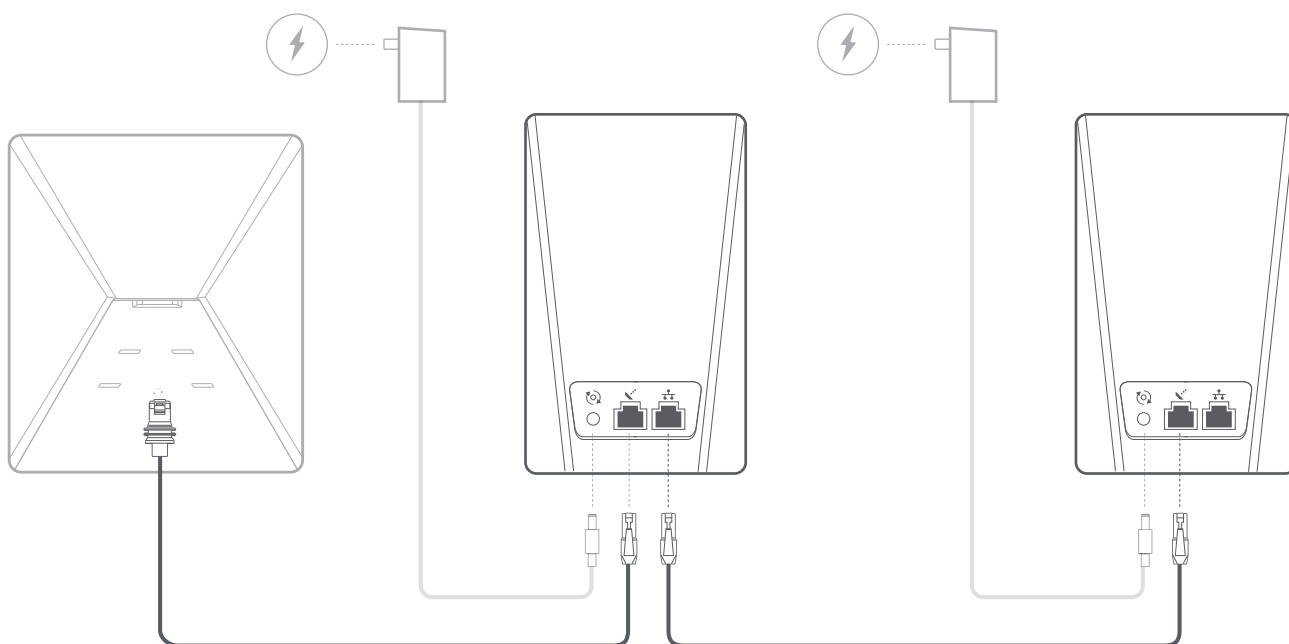

1. Set up your Starlink Kit as shown in the install instructions and ensure you are online.
2. Place your Starlink Router Mini in the desired location and connect the power supply.
3. Plug in an ethernet cable into the LAN port of the back of your existing Starlink router or Starlink Mini. For Gen 3 you will need to remove the protective cover to access the ports.
4. Run the ethernet cable from the main router to your Starlink Router Mini. Connect to the WAN port of your router (Starlink symbol) to create a wired mesh network.
5. For a wired connection to a Starlink Mini Kit, use 15m Mini Starlink Ethernet Cable to ensure waterproof connection.
6. If connecting to another Starlink router, use a RJ45 shielded Cat5e cable or greater.
7. Repeat with additional mesh nodes.


WIRELESS MESH GUIDE

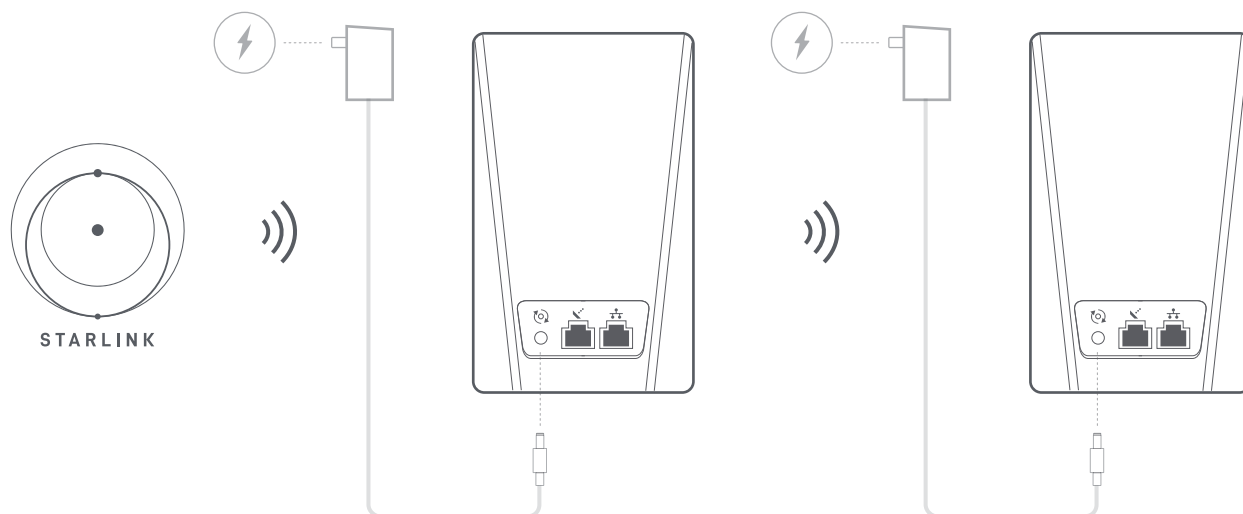


1. Ensure your Starlink Kit is set up and connected to the internet prior to adding your mesh nodes.
2. Find suitable install locations for your mesh nodes and plug them into power outlets.
3. Open the Starlink App.
4. Wait 1-2 minutes for a "New Mesh Node(s)" notification to appear in the app.
5. If a notification does not appear in the app, try positioning your router closer to your main router.
6. Tap "Pair" or "Pair All". The node(s) will begin connecting on the "Network" screen. Connection will take about 1-5 minutes.
7. Repeat with additional mesh nodes.

PIPE ADAPTER INSTALLATION**1 | Remove Kickstand**

Squeeze the release tab and pull it away from its fixed location.

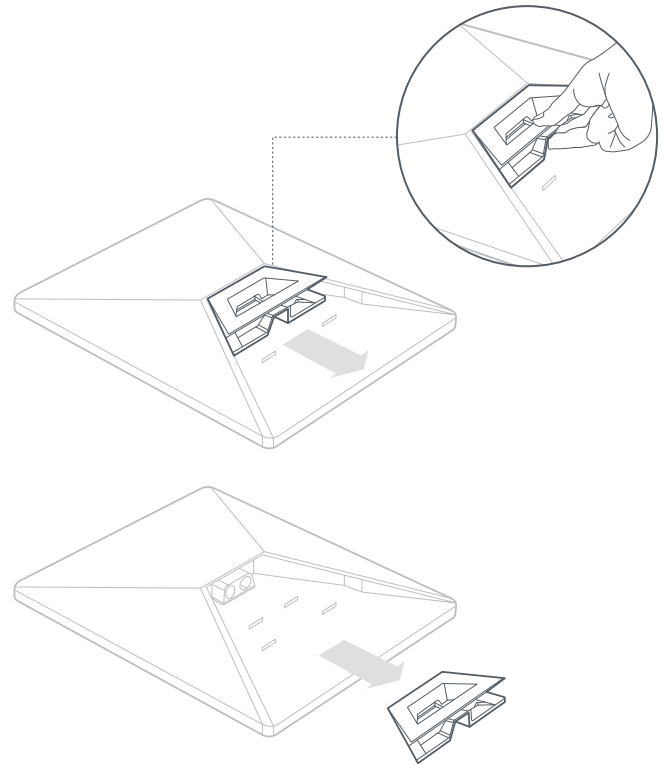**2 | Remove Hex Key**

Remove hex key from the bottom of the mount.

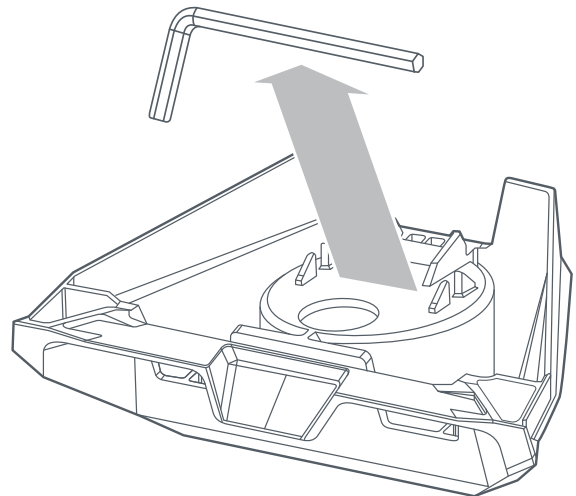


PIPE ADAPTER INSTALLATION

3 | Route Cable and Install Mount

Route the power cable through the opening in the mount and out the front end.


Plug the cable into your Starlink and ensure the plug is fully inserted such that the plug face is flush with the surface.

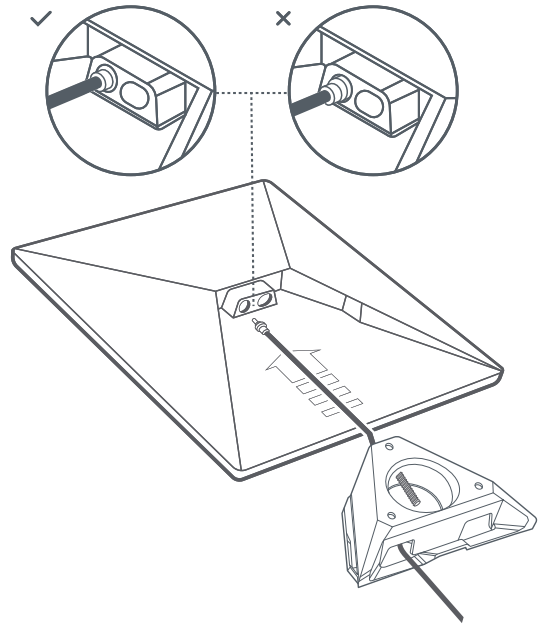

4 | Mount Starlink to Pipe

Loosen the attachment screw and slide the mount onto your mounting pipe. Temporarily tighten the attachment screw to stabilize Starlink onto pipe.

Connect the other end of the Starlink cable to the power supply and plug it into power outlet.

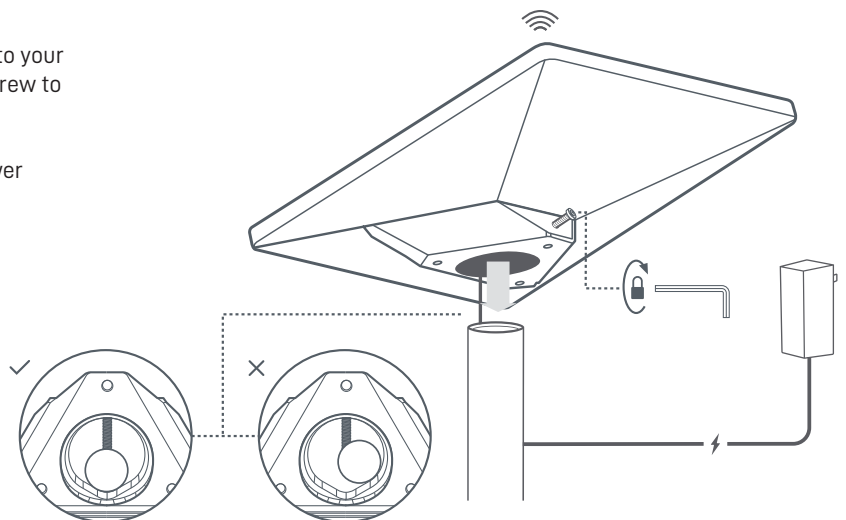


PIPE ADAPTER INSTALLATION

5 | Align Your Starlink

An alert on the App will show if you need to rotate Starlink to be properly aligned.


Click the alert to use the alignment tool.

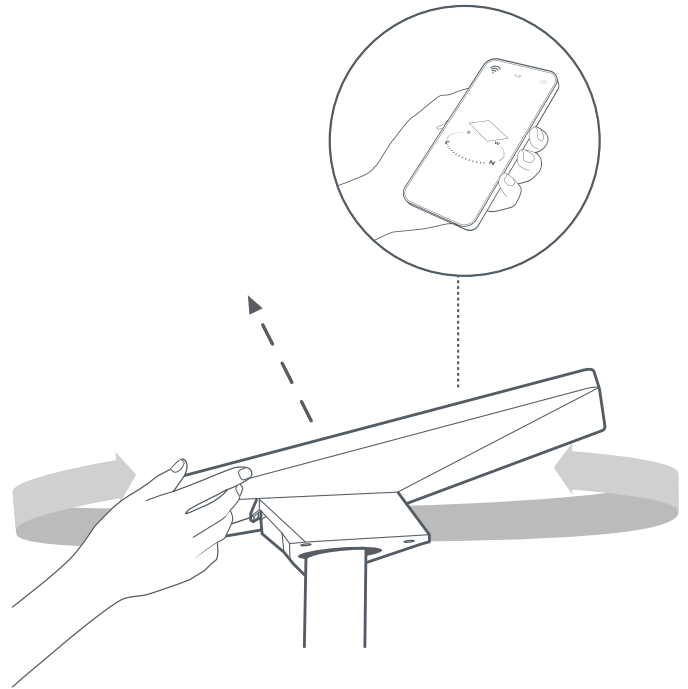

6 | Lock Alignment

Tighten the attachment screw with the hex key on the mount until hand tight to lock your Starlink in place.


Ensure your Starlink is firmly attached.

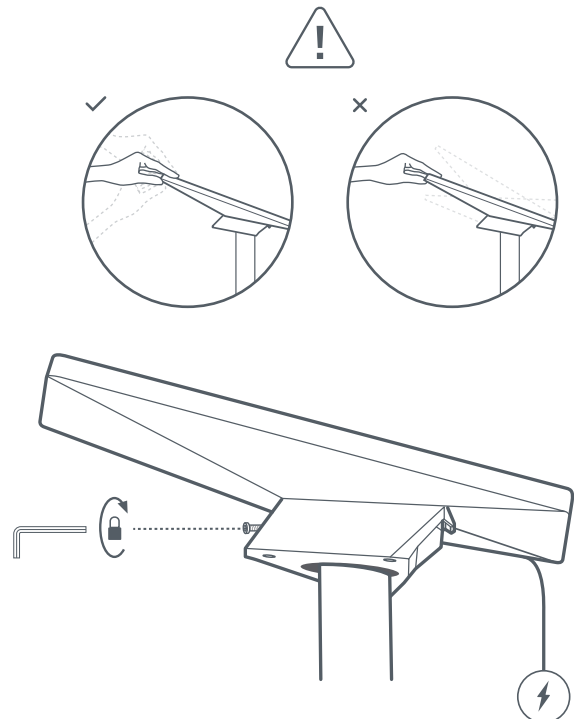

FLAT MOUNT INSTALLATION

1 | Mark the Pilot Holes


Identify the installation location and mark the location of the 3 holes on your Mini Pipe Adapter and Flat Mount using a pen or pencil.

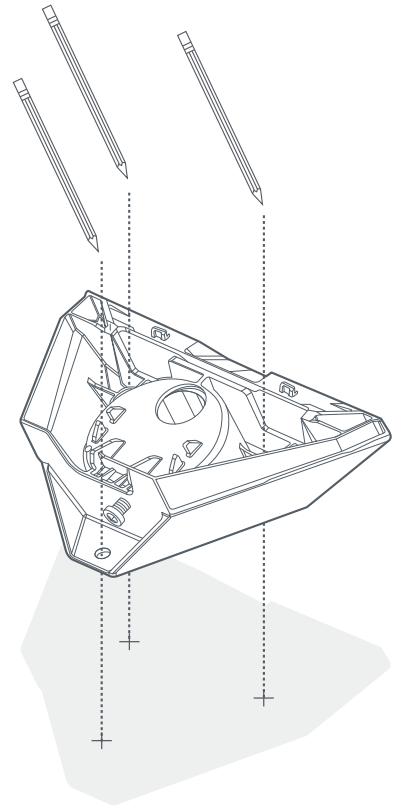

2 | Drill the Pilot Holes

Drill the pilot holes based on your preferred hardware. We recommend using a 6 mm (1/4 in) screw or bolt. For wood screws, use a 4.5 mm (3/16 in) drill bit and for bolts, use a 6.5 mm (9/32 in) drill bit.


A mounting surface of at least 0.5in thick is recommended if using a wood screw.

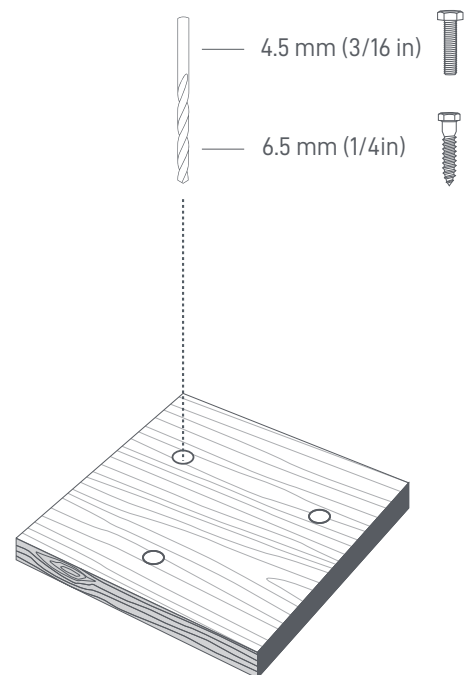

FLAT MOUNT INSTALLATION


3 | Screw Mount to Surface

Secure the mount to surface. Fasteners not included. We recommend using a 6 mm (1/4 in) screw or bolt.

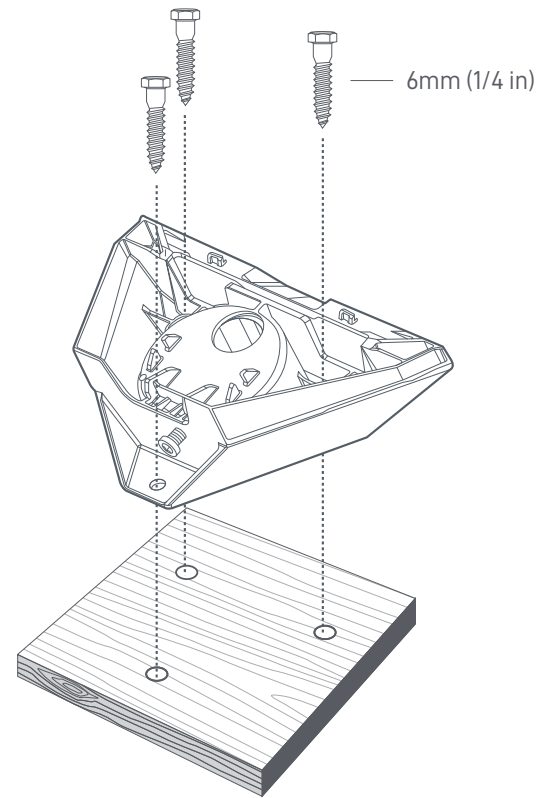

4 | Route Cable Through Mount


Route the Starlink cable through the opening in the mount and out the front end.

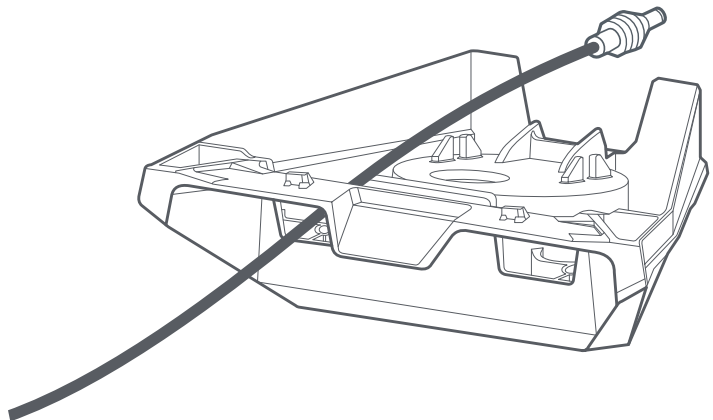

FLAT MOUNT INSTALLATION


5 | Plug in Cable and Install Starlink

Plug the ethernet cable into your Starlink and ensure the ethernet cable is fully inserted. Slide your Starlink into the mount until it clicks into place.

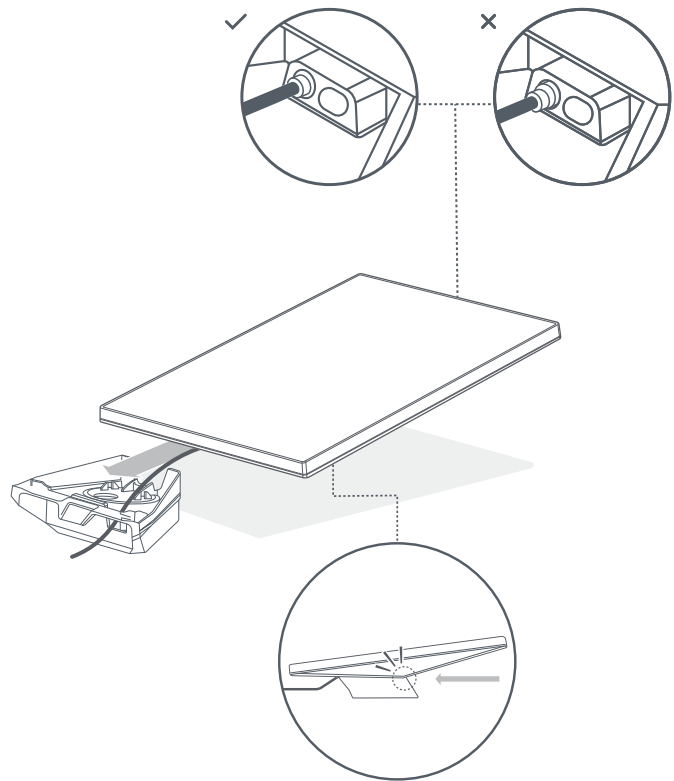

Removing Your Starlink

If you need to remove your Starlink, push down on the release tab on the mount while pushing your Starlink away from you.

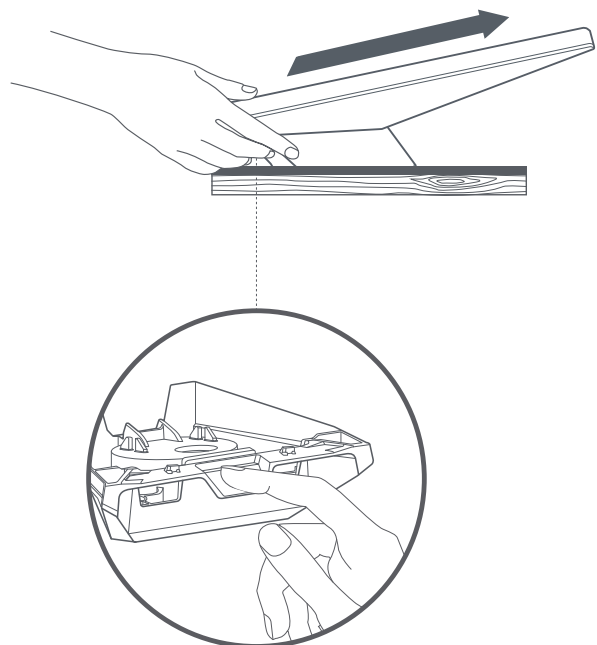

INSTALLATION CONDITIONS

⚠**CAUTION!** If you are uncomfortable with any part of the installation process, do not attempt - contact a professional to install your Starlink. Starlink is not responsible for injury or damage to property caused by the installation process.

Kit Installation for Use on Moving Vehicles.

⚠**CAUTION!** Take extra care if installing a Starlink for being used on a moving vehicle or vessel. Ensure that the mount is installed firmly on a structurally sound, horizontal surface away from other equipment to give your Starlink a clear view of the sky. Equipment falling off the vehicle due to poor installation practices can cause serious accidents resulting in bodily injury, do not mount the Starlink on any vehicle or vessel if the mount structure is not stable, or if it cannot be properly secured as described in this guide. Ensure the installation on vehicle or vessel is compliant with local Department of Transportation or maritime regulations.

⚠**WARNING!** Mounts are not designed for high winds, hurricane or tornado wind loads. Tethering should be used in all cases to prevent failure in an unexpected wind event. See installation instructions before connecting this equipment to the input supply.

⚠**WARNING!** To avoid personal injury and/or damage to the property when drilling, take caution and follow basic safety procedures, including:

- Wear appropriate eye, hand, and face protection.
- Avoid studs, electrical wiring, and water lines when drilling. Drilling into any of these can lead to fire, shock, injury, or death.
- Drill at a slight downward angle from the home interior to the home exterior and thoroughly apply sealant. Improper drilling and sealing may lead to water and/or bug intrusion and/or damage.