

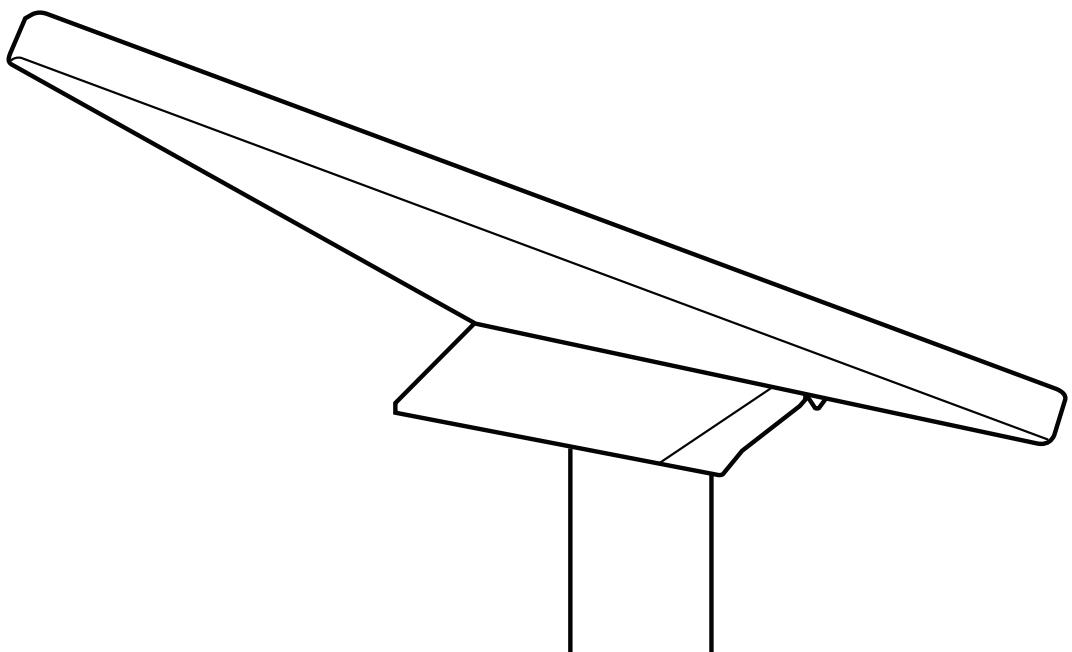


STARLINK | PIPE ADAPTER AND FLAT MOUNT INSTALL GUIDE

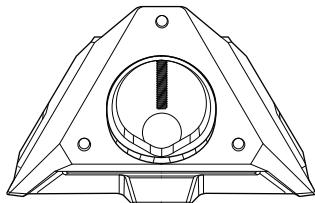


What's In The Box


Pipe Adapter and Flat Mount






Hex Key

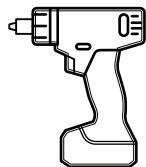Recommended Tools

Drill / Impact Driver



Drill Bit
4.5 mm (3/16in)Drill Bit
6.5 mm (1/4in)

Pen

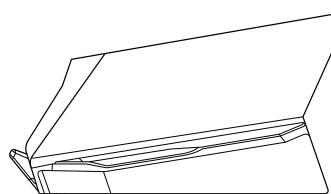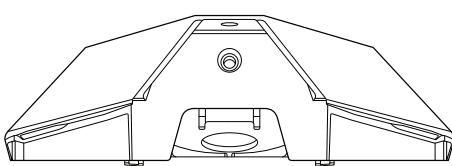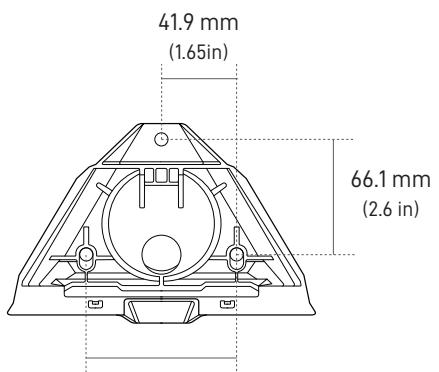103.5 mm
(4.07 in)58.1 mm
(2.29 in)172.7 mm
(6.8in)

1 | Download the Starlink App


Scan the QR code to download the Starlink App.

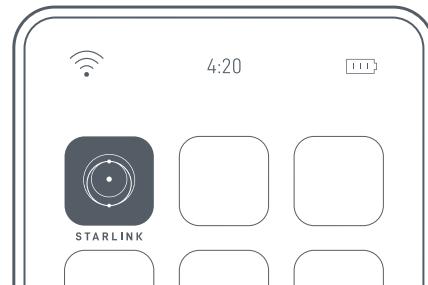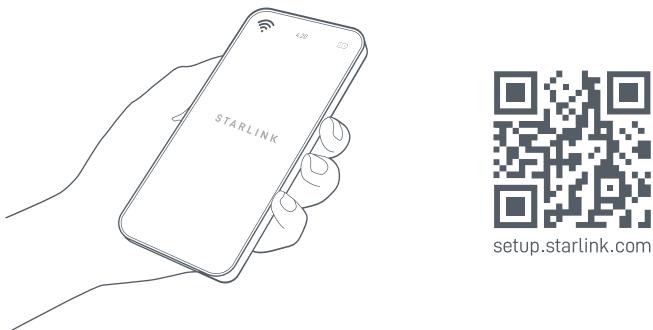

2 | Find Mounting Location


Your Starlink needs a clear view of the sky so it can stay connected with satellites as they move overhead. Objects that obstruct the connection between your Starlink and the satellite will cause service interruptions. Use the obstructions tool in your App to ensure you have selected a suitable mounting location.

You will also want to ensure your Starlink is mounted in the correct orientation relative to your vehicle as shown below.

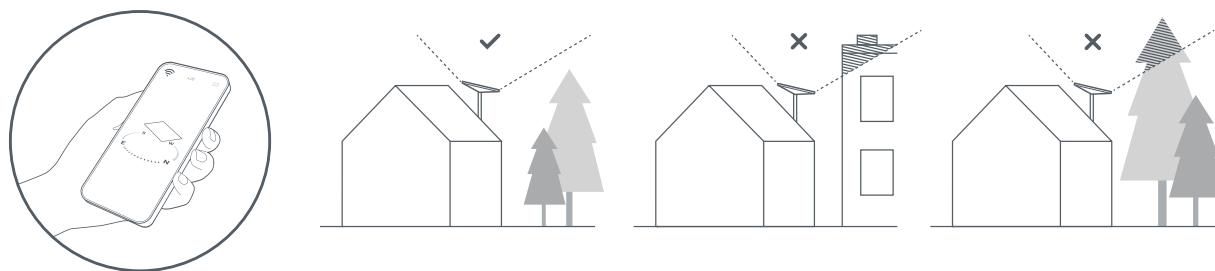


3 | Remove Kickstand

Squeeze the release tab and pull it away from its fixed location.

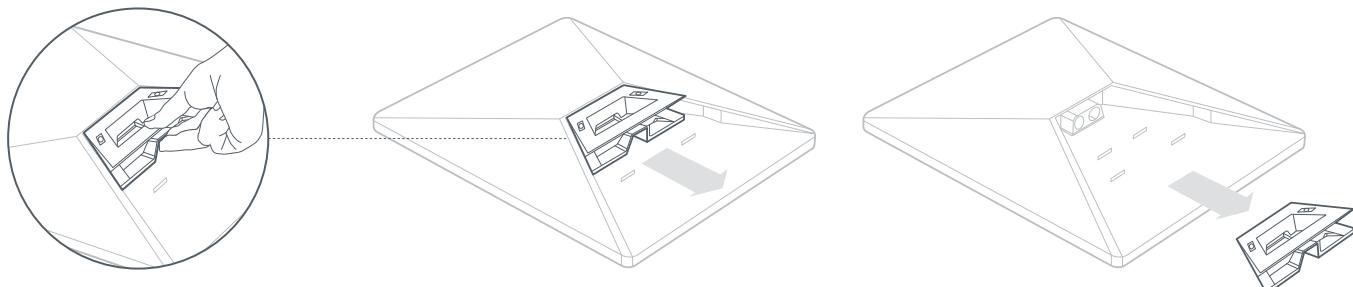


PIPE ADAPTER INSTALLATION**1 | Remove Hex Key**

Remove hex key from the bottom of the mount.

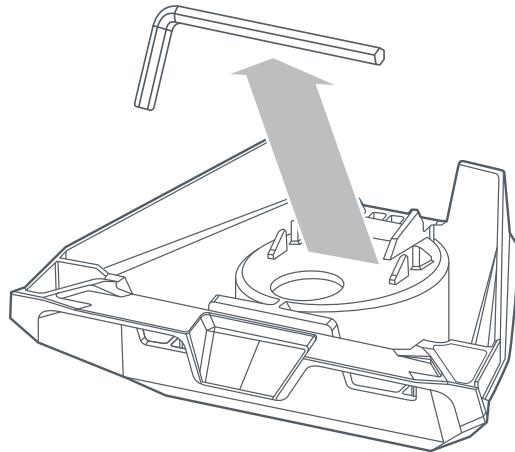**2 | Route Cable and Install Mount**

Route the power cable through the opening in the mount and out the front end.

Plug the cable into your Starlink and ensure the plug is fully inserted such that the plug face is flush with the surface.

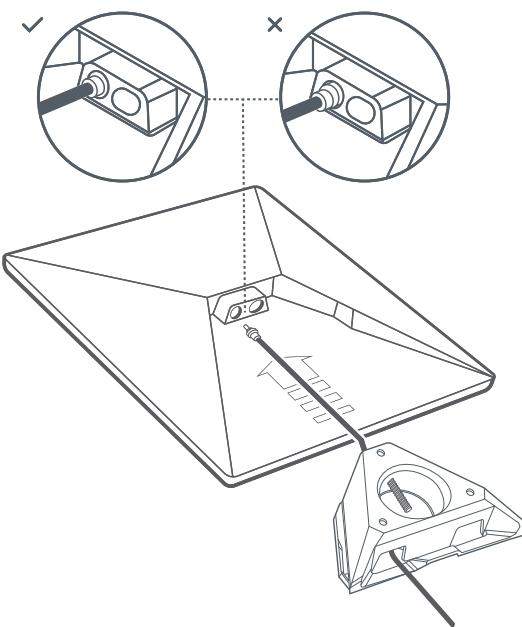


PIPE ADAPTER INSTALLATION

3 | Mount Starlink to Pipe

Loosen the attachment screw and slide the mount onto your mounting pipe. Temporarily tighten the attachment screw to stabilize Starlink onto pipe.


Connect the other end of the Starlink cable to the power supply and plug it into power outlet.

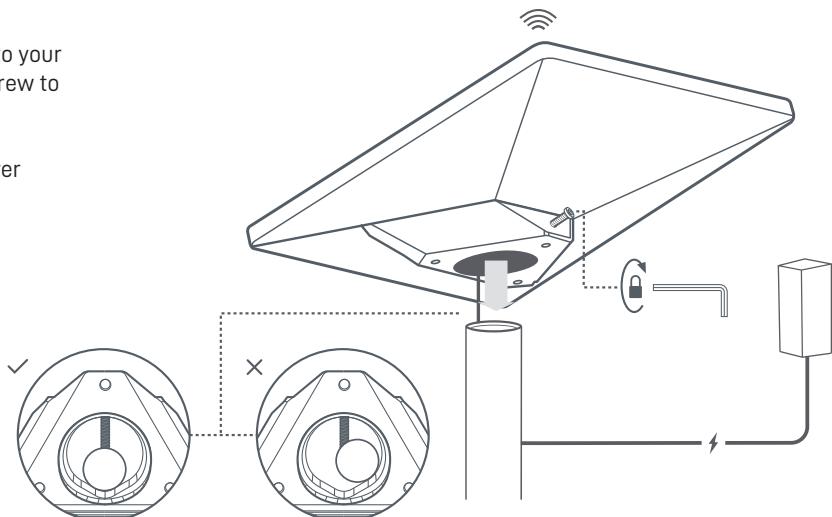

4 | Align Your Starlink

An alert on the App will show if you need to rotate Starlink to be properly aligned.



Click the alert to use the alignment tool.

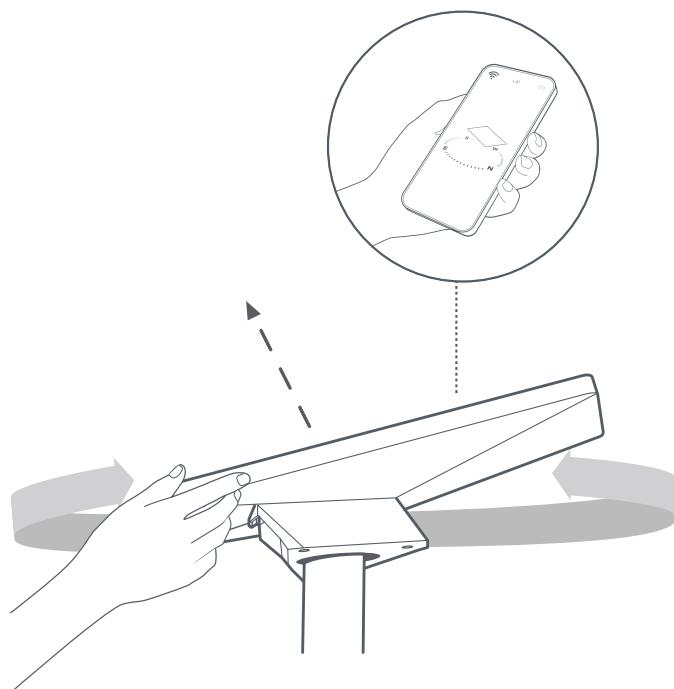

PIPE ADAPTER INSTALLATION**5 | Lock Alignment**

Tighten the attachment screw with the hex key on the mount until hand tight to lock your Starlink in place.


Ensure your Starlink is firmly attached.

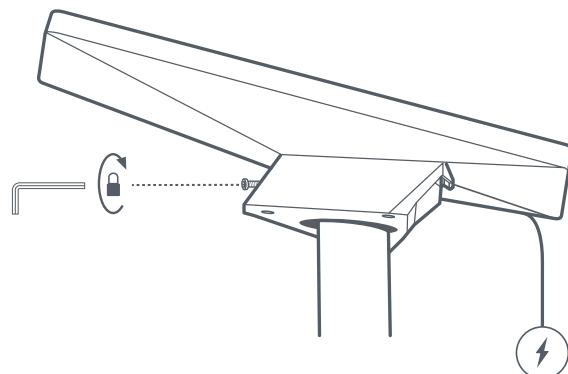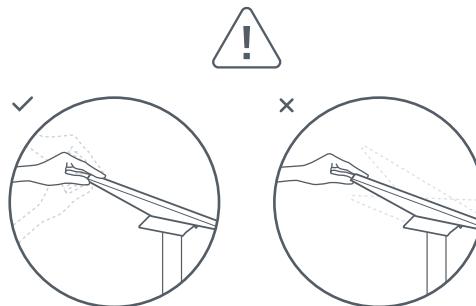

FLAT MOUNT INSTALLATION

1 | Mark the Pilot Holes



Identify the installation location and mark the location of the 3 holes on your Mini Pipe Adapter and Flat Mount using a pen or pencil.

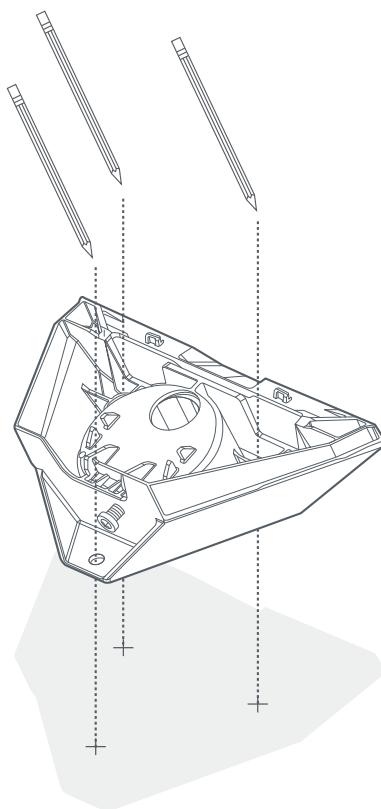

2 | Drill the Pilot Holes

Drill the pilot holes based on your preferred hardware. We recommend using a 6 mm (1/4 in) screw or bolt. For wood screws, use a 4.5 mm (3/16 in) drill bit and for bolts, use a 6.5 mm (9/32 in) drill bit.


A mounting surface of at least 0.5in thick is recommended if using a wood screw.

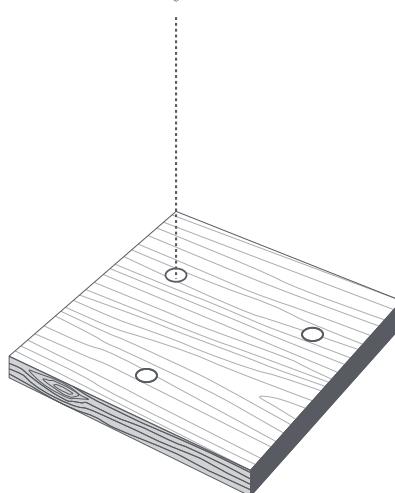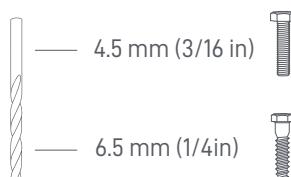

FLAT MOUNT INSTALLATION


3 | Screw Mount to Surface

Secure the mount to surface. Fasteners not included. We recommend using a 6 mm (1/4 in) screw or bolt.

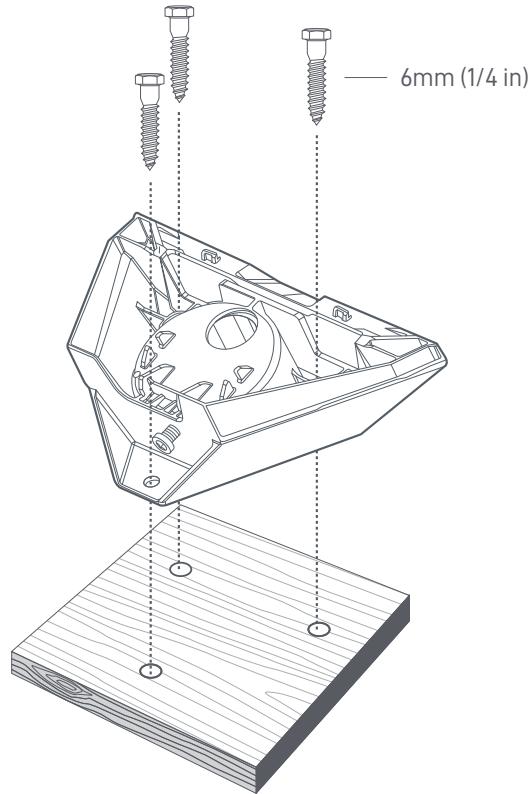


4 | Route Cable Through Mount

Route the Starlink cable through the opening in the mount and out the front end.

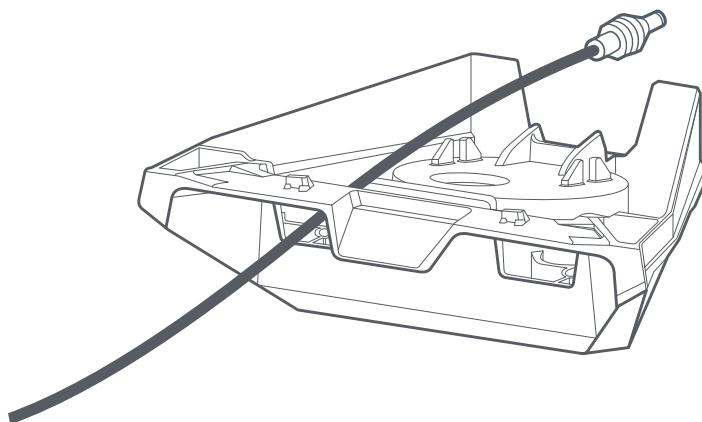


FLAT MOUNT INSTALLATION**5 | Plug in Cable and Install Starlink**

Plug the ethernet cable into your Starlink and ensure the ethernet cable is fully inserted. Slide your Starlink into the mount until it clicks into place.

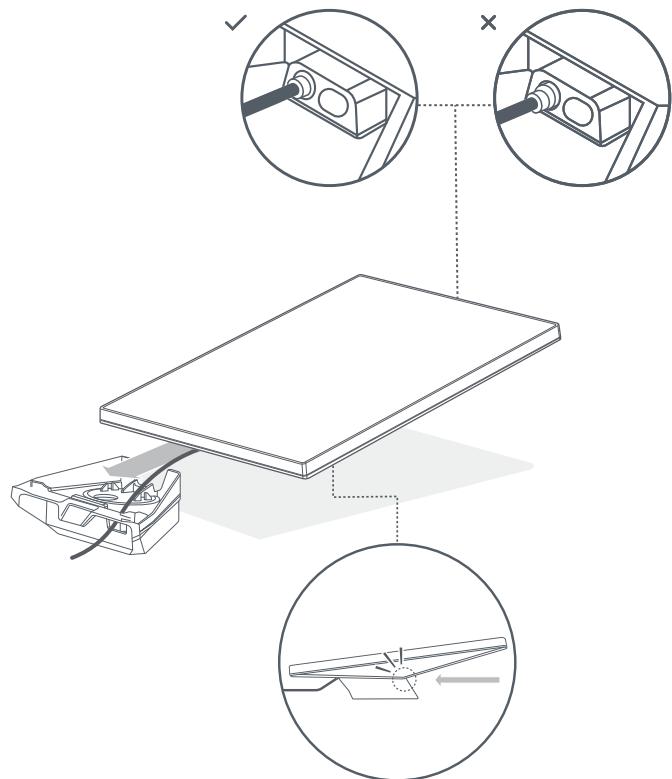**Removing Your Starlink**

If you need to remove your Starlink, push down on the release tab on the mount while pushing your Starlink away from you.

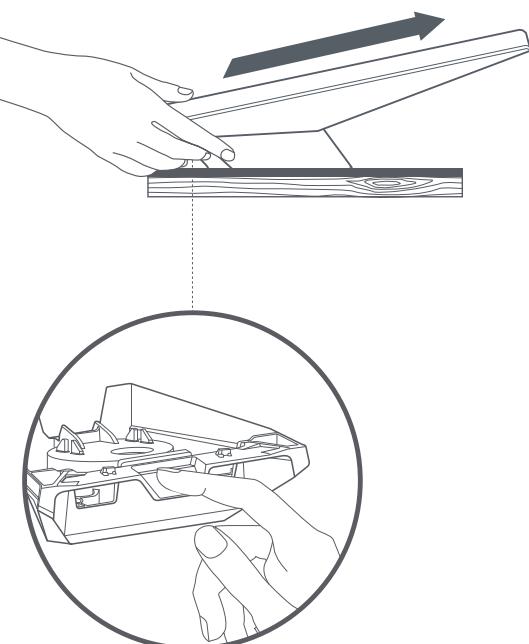

INSTALLATION CONDITIONS

⚠CAUTION! If you are uncomfortable with any part of the installation process, do not attempt - contact a professional to install your Starlink. Starlink is not responsible for injury or damage to property caused by the installation process.

Kit Installation for Use on Moving Vehicles.

⚠CAUTION! Take extra care if installing a Starlink for being used on a moving vehicle or vessel. Ensure that the mount is installed firmly on a structurally sound, horizontal surface away from other equipment to give your Starlink a clear view of the sky. Equipment falling off the vehicle due to poor installation practices can cause serious accidents resulting in bodily injury, do not mount the Starlink on any vehicle or vessel if the mount structure is not stable, or if it cannot be properly secured as described in this guide. Ensure the installation on vehicle or vessel is compliant with local Department of Transportation or maritime regulations.

⚠WARNING! Mounts are not designed for high winds, hurricane or tornado wind loads. Tethering should be used in all cases to prevent failure in an unexpected wind event. See installation instructions before connecting this equipment to the input supply.

⚠WARNING! To avoid personal injury and/or damage to the property when drilling, take caution and follow basic safety procedures, including:

- Wear appropriate eye, hand, and face protection.
- Avoid studs, electrical wiring, and water lines when drilling. Drilling into any of these can lead to fire, shock, injury, or death.
- Drill at a slight downward angle from the home interior to the home exterior and thoroughly apply sealant. Improper drilling and sealing may lead to water and/or bug intrusion and/or damage.