


What's in the Box



Pivot Mount

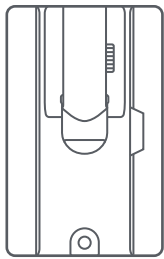

Mast Adapter



Mast



Sealant Tape Strips



Sealant Tape Squares




Lag Screws  
2x  
3/8 in x 3.5 in



Cable Routing Clips  
20x

Recommended Tools

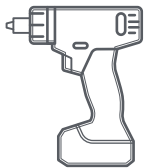

Drill / Impact Driver



Drill Bit  
6 mm (1/4 in)



Hex Socket  
9/16 in




Marker




Level

448 mm  
(17.6 in)

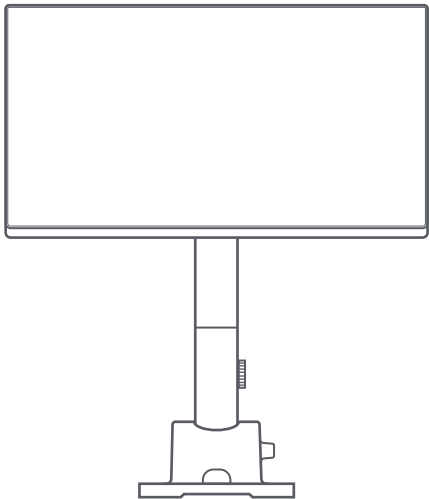

140 mm  
(5.5 in)


235 mm  
(9.25 in)

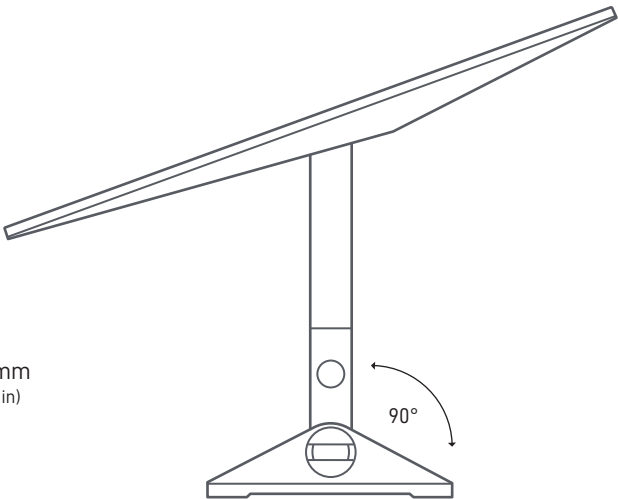

223 mm  
(8.78 in)


## 1 | Download the Starlink App

Scan the QR code to download the Starlink App.

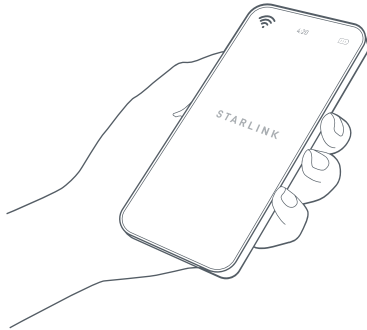


## 2 | Find Mounting Location

Your Starlink needs a clear view of the sky so it can stay connected with satellites as they move overhead. Objects that obstruct the connection between your Starlink and the satellite, such as a tree branch, pole, or roof, will cause service interruptions. Use the obstruction tool in the App to ensure you have selected a suitable mounting location.

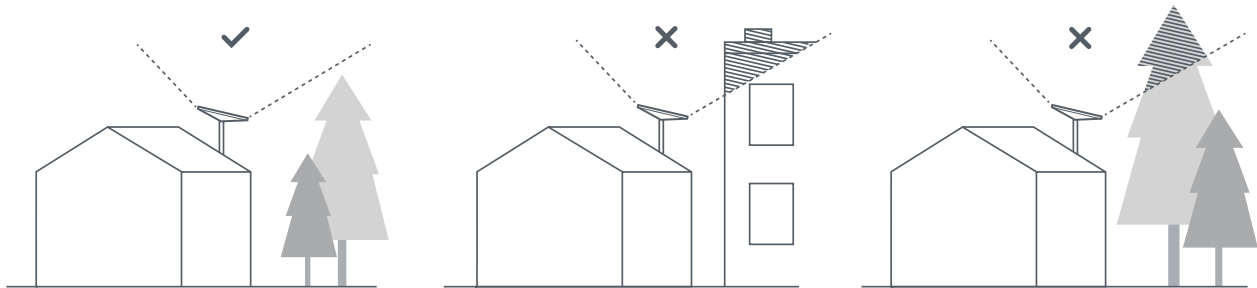

## 3 | Remove Kickstand


Squeeze the release tab and pull it away from its fixed location.

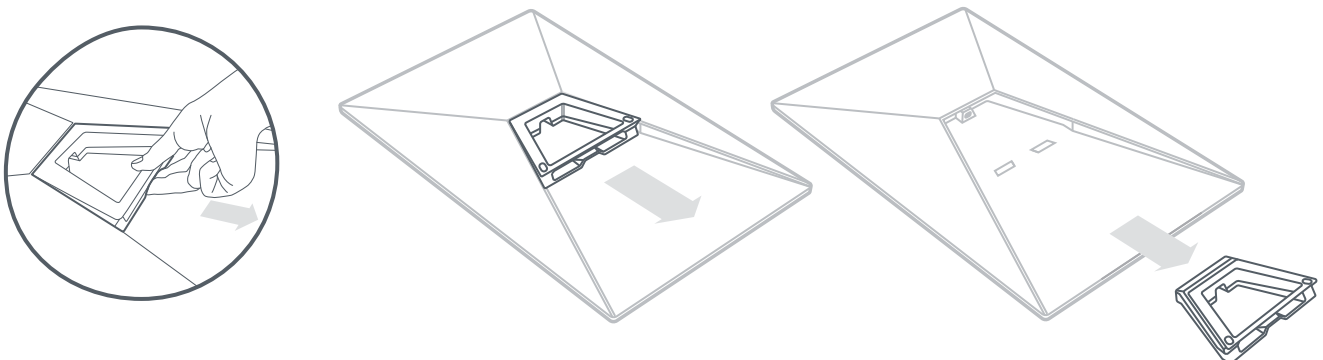

#### 4 | Mark the Pilot Holes


Mark the location of the two holes on your pivot mount using a marker.

Place the holes directly over a structural beam to best secure your Starlink.

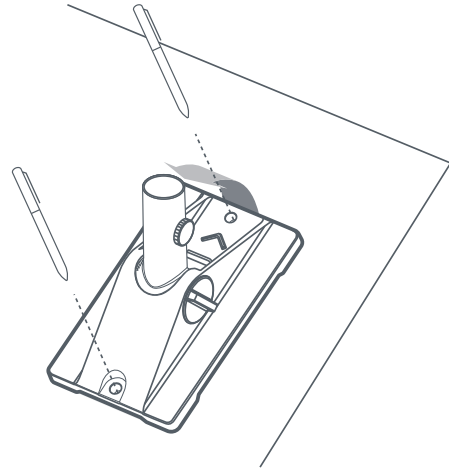


#### 5 | Drill the Pilot Holes

Drill the holes with a 6 mm (1/4 in) drill bit.

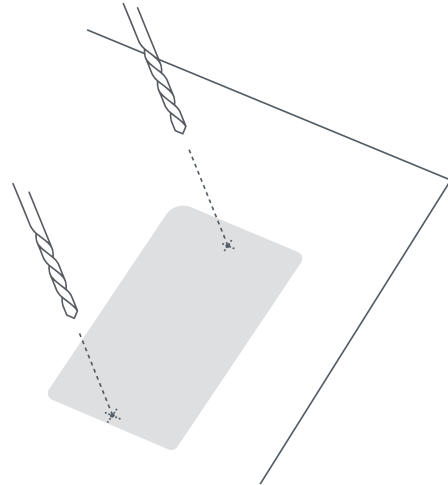


#### 6 | Apply Sealant and Screw in Wall Mount

Ball up the squares and push them into the holes, then apply the sealant tape over the holes.

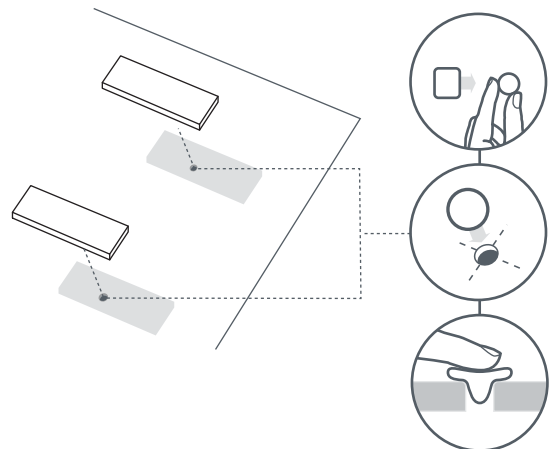


### 7 | Screw in Mount Base

Screw in the mount using the provided screws.  
The arrow on the mount should point up the slope of your roof.

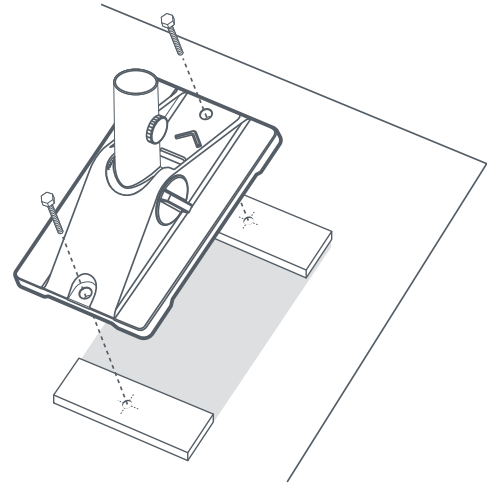


### 8 | Align Mast Vertically

Tighten the bottom locking mechanism when mast is vertical.

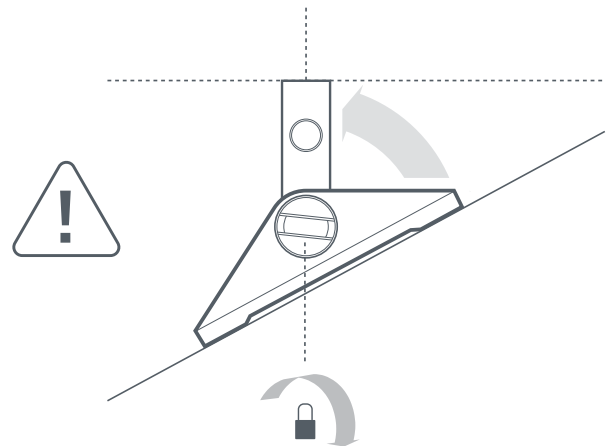


### 9 | Insert Mast Base

Insert the mast tube into the base until it clicks into place.

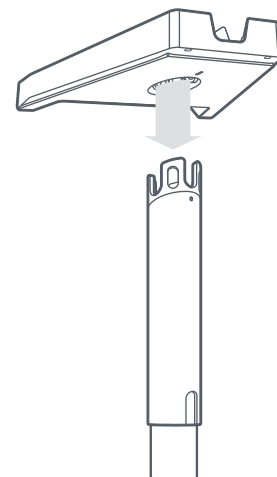


10 | **Route Cable Through Mast**

Insert the Starlink cable through the hole in the side of the mast and up through the slot in the adapter.

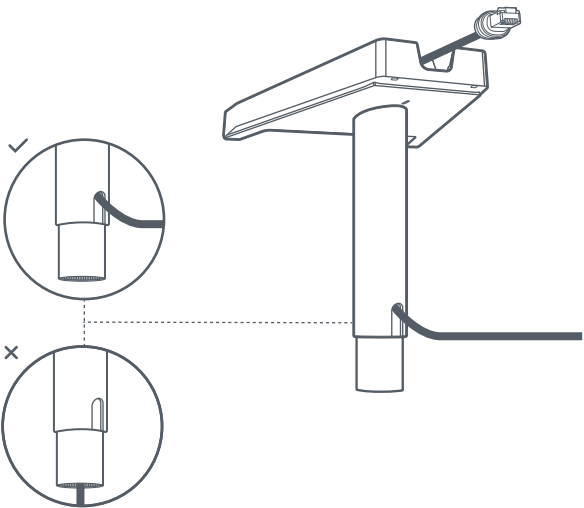


11 | **Plug-In Cable and Install Mast**

Plug the cable into your Starlink. Ensure the plug is fully inserted such that the plug face is flush with the surface. Next, slide the mast in until it clicks into place.

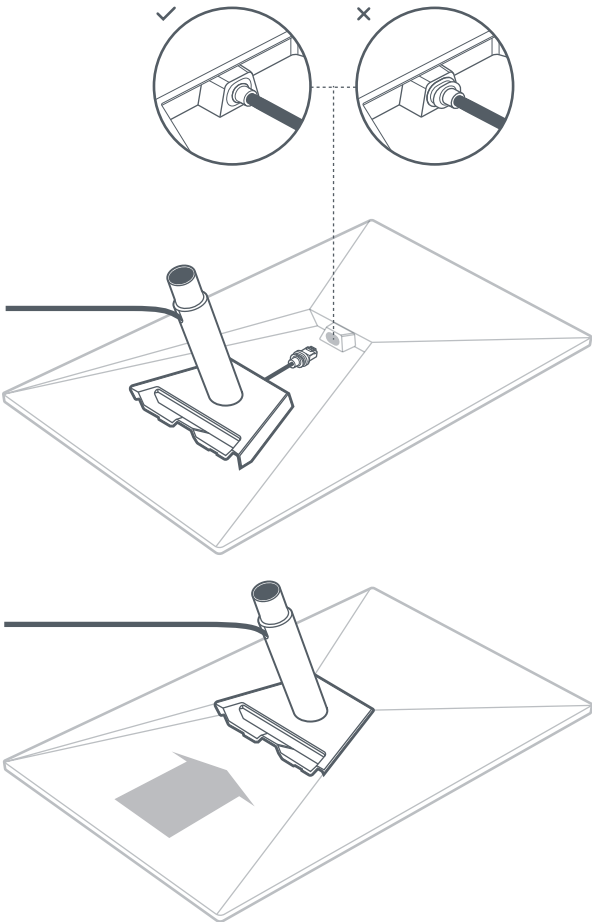

### 12 | Insert Starlink into Pivot Mount


Slide the mast into the pivot base. Rotate your Starlink to face a clear view of the sky.

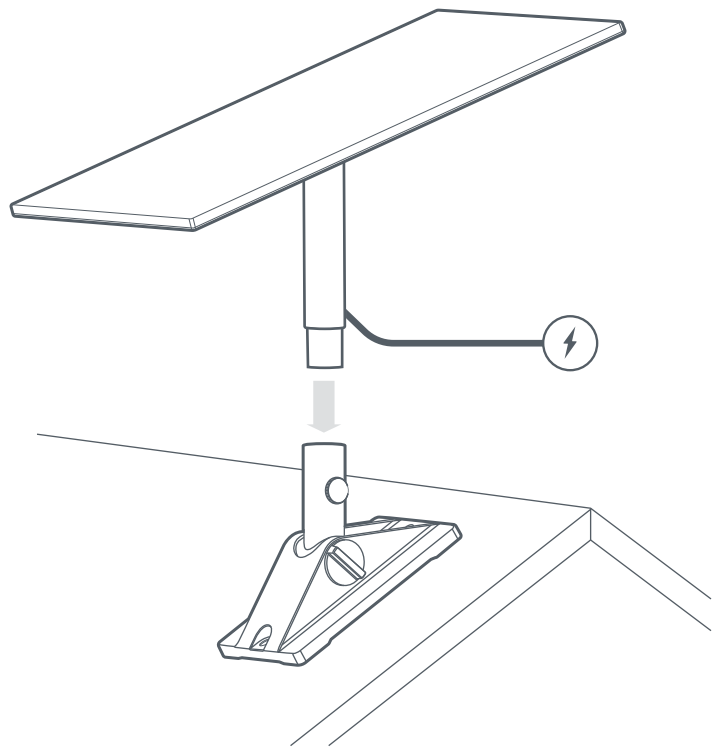

### 13 | Align and Lock Your Starlink

An alert on the App will show if you need to rotate Starlink to be properly aligned.

Click the alert to use the alignment tool. Once aligned, tighten the thumb-screw on the mast to prevent rotation.

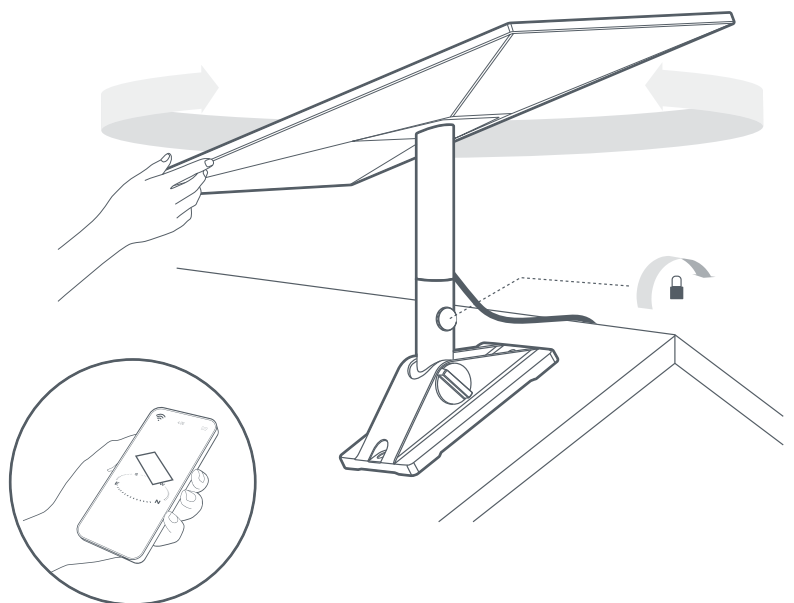

**INSTALLATION CONDITIONS**

⚠**CAUTION!** If you are uncomfortable with any part of the installation process, do not attempt - contact a professional to install your Starlink. Starlink is not responsible for injury or damage to property caused by the installation process.

**Kit Installation for Use on Moving Vehicles.**

⚠**CAUTION!** Take extra care if installing a Starlink for being used on a moving vehicle or vessel. Ensure that the mount is installed firmly on a structurally sound, horizontal surface away from other equipment to give your Starlink a clear view of the sky. Equipment falling off the vehicle due to poor installation practices can cause serious accidents resulting in bodily injury, do not mount the Starlink on any vehicle or vessel if the mount structure is not stable, or if it cannot be properly secured as described in this guide. Ensure the installation on vehicle or vessel is compliant with local Department of Transportation or maritime regulations.

⚠**WARNING!** Mounts are not designed for high winds, hurricane or tornado wind loads. Tethering should be used in all cases to prevent failure in an unexpected wind event. See installation instructions before connecting this equipment to the input supply.

⚠**WARNING!** To avoid personal injury and/or damage to the property when drilling, take caution and follow basic safety procedures, including:

- Wear appropriate eye, hand, and face protection.
- Avoid studs, electrical wiring, and water lines when drilling. Drilling into any of these can lead to fire, shock, injury, or death.
- Drill at a slight downward angle from the home interior to the home exterior and thoroughly apply sealant. Improper drilling and sealing may lead to water and/or bug intrusion and/or damage.